


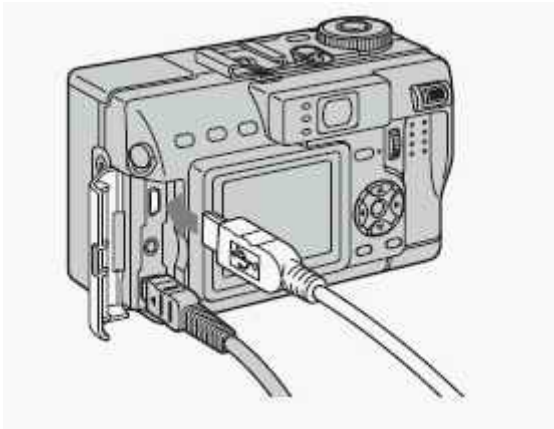 
Sony DSC-V1 connection to 3PM My Photo Manager

*Step 1. Power On My Photo Manager. Slide the Mode Switch to Set Up and check that the USB Mode is set to **Normal**, not PTP.*


 (Setup 2)


Item	Setting	Description
USB Connect	PTP / <input checked="" type="checkbox"/> Normal	Switches the USB mode (pages 85 and 95).
Video Out	NTSC PAL	- Sets the video output signal to NTSC mode (e.g., USA, Japan). - Sets the video output signal to PAL mode (e.g., Europe).

Step 2. Connect the USB Cable (supplied with the camera) to the DSC-V1



Step 3. Connect the other side of the USB Cable to My Photo Manager OTG port.

Step 4. Slide the Mode Switch to 

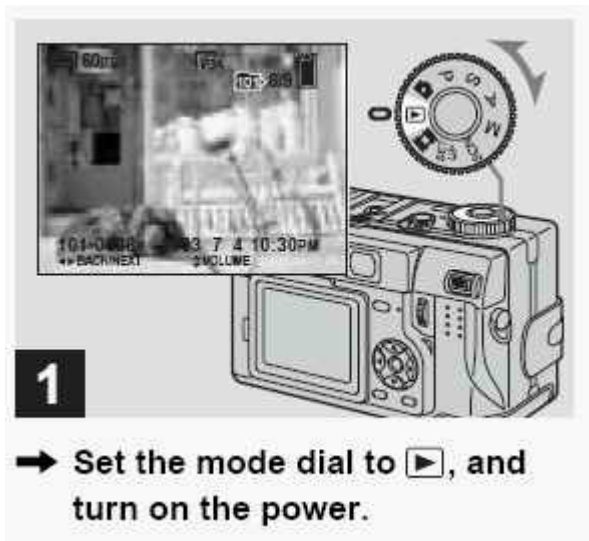


Step 5. Choose the operation you want to carry out in My Photo Manager.

Backup to copy the entire content of Sony DSC-V1 Memory Stick card.

Copy to select certain files or folders to and from My Photo Manager

Delete to delete certain files or folders on the camera or on the Photo Manager.

 During transfer the LCD of the DSC-V1 should display the following. The access indicator should be white when not transferring data and should be red while transfer happens.

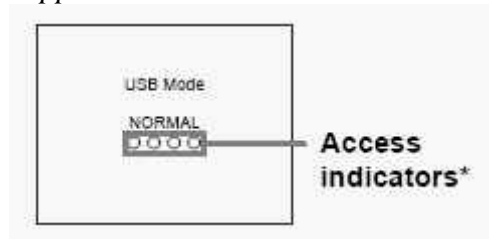

Step 6. Wait until the transfer is complete (100% indicator) and followed by a loud beep. Plug out the USB cable and your camera is ready to use.

Step 7. Format the memory card so you are ready to take more pictures or video.

The pictures that has been transferred to My Photo Manager are not deleted from the cameras' memory card. To empty the card, you should format your memory card. See the following picture.

